



Restraint Storage and Disassembly

If you must keep the restraint in storage, keep it in conditions with a temperature range of -22°F to +131°F (-30°C to +55°C). You must protect the restraint from sunlight, dust, moisture and other contamination.

After removal from storage, new restraints shall be subject to an inspection check in accordance with the TESTING and FAULT ISOLATION and CHECK sections of the applicable CMM before installation into the aircraft.

The restraint system may not be disassembled.

Further repair of this system may only be carried out by AmSafe's Phoenix, Atlanta or London facilities, or an AmSafe approved repair station.

AmSafe, Inc. is not responsible for damage or malfunctions resulting from any unauthorized attempt to repair or disassemble the restraint system.